



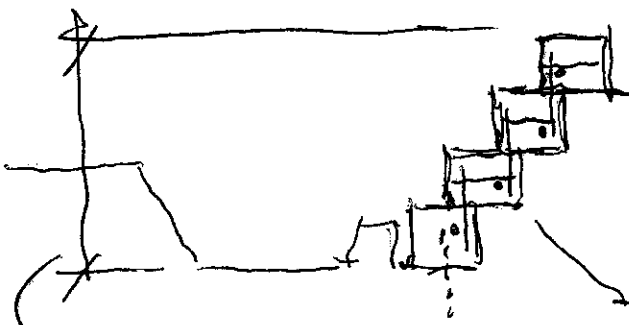

PART OF FILL
FROM SLOPE ABOVE

EXCAVATE SECTIONS
OF TRENCH FOR 1ST LAYER
OF BINS. HOLD BACK 2'
FROM NEW STREAM EDGE
TO AVOID DEP/REC ISSUES

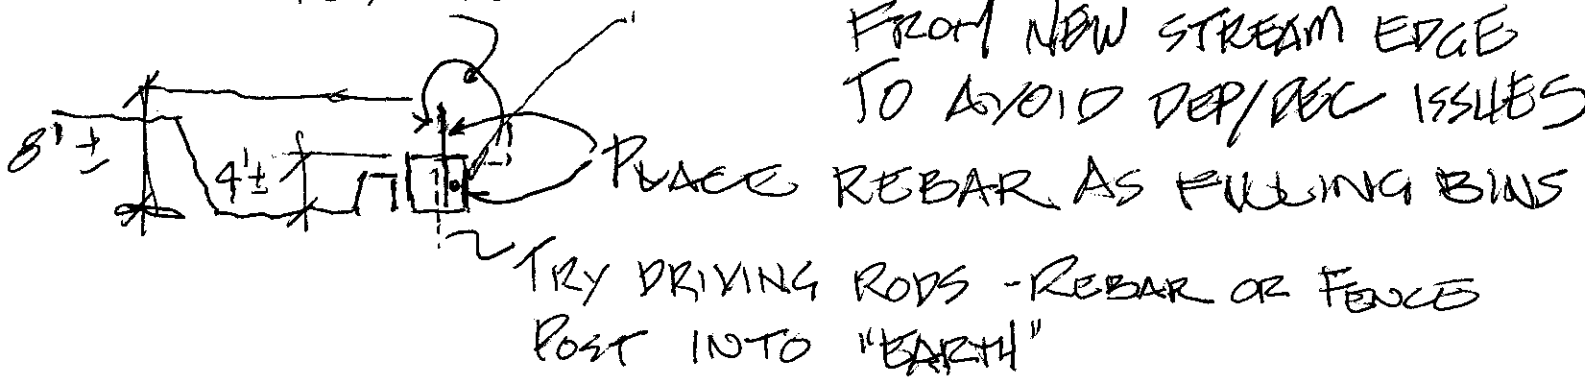

1' OVERLAP ADD'T LAYERS
2' OVERLAP 1ST LAYER

Notch each layer in using
STONE TO HELP FILL LOWER LEVEL

12-16'
ABOVE CURRENT STREAM BED

• Mix in 20% dirt or 30% UNSIFTED FILL w/ROCK, DON'T
USE GRAVEL, DON'T DO ANYTHING MORE THAN
UNSIFTED FILL