


HOME MADE GABIONS

③

REMOVE 6' OF ROCK
TO WATER
LEVEL
OR
BETTER
STREAM
BOTTOM

ONE DAY'S WORK
WORTH OF FENCE
UNROVED.

REMOVED ROCK

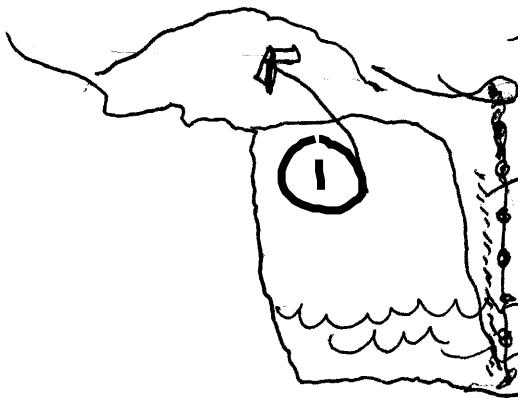

TIE OFF FENCE
TO ROCK AT BOTTOM
OF PILE

BURLAP
(OPT REC)

TIE TO FENCE
W/ STRING

②

WIRE FENCING (VINYL COATED IF AFFORDABLE)
BURLAP & LEAVE IN PLACE (IF AFFORDABLE)
(USE & REMOVE TARP
OTHERWISE)

IF WATER DEEP > 2'
FAST ANYWHERE
W/IN 1000' OF SHE
WEAR LIFE JACKETS

①

TIE TO LARGE ROCKS & SAFETY
PERIODICALLY ROPES

ALWAYS WORK IN
PAIRS.

②

TOP ROCK
FENCE

MIDDLE

BOTTOM

ADD 18" ROCK TO
BOTTOM &
MIDDLE
LAYERS

Creating Next 6'
Clear space

